



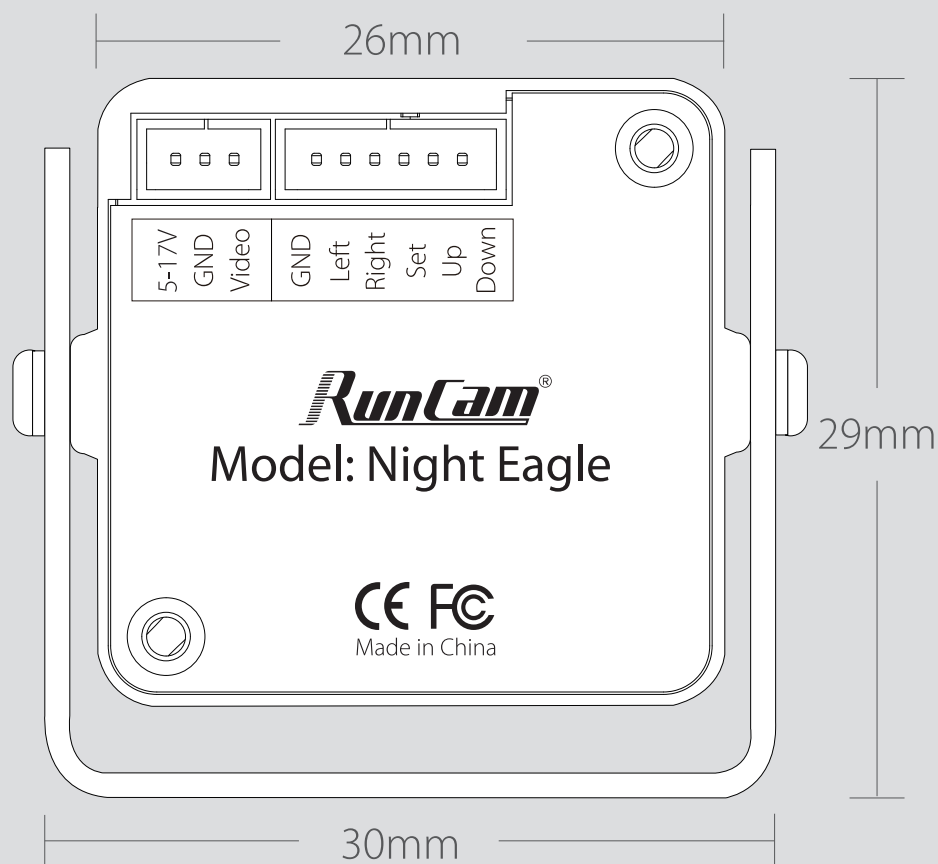

RunCam Night Eagle


0.00001Lux | Global WDR

800TVL | Black & White Camera

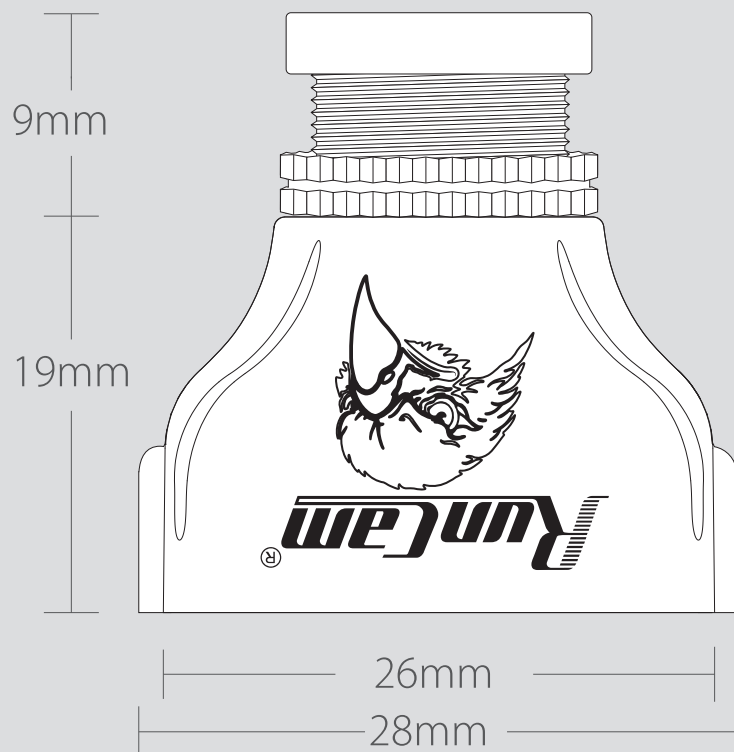

Connection


① For OSD setting

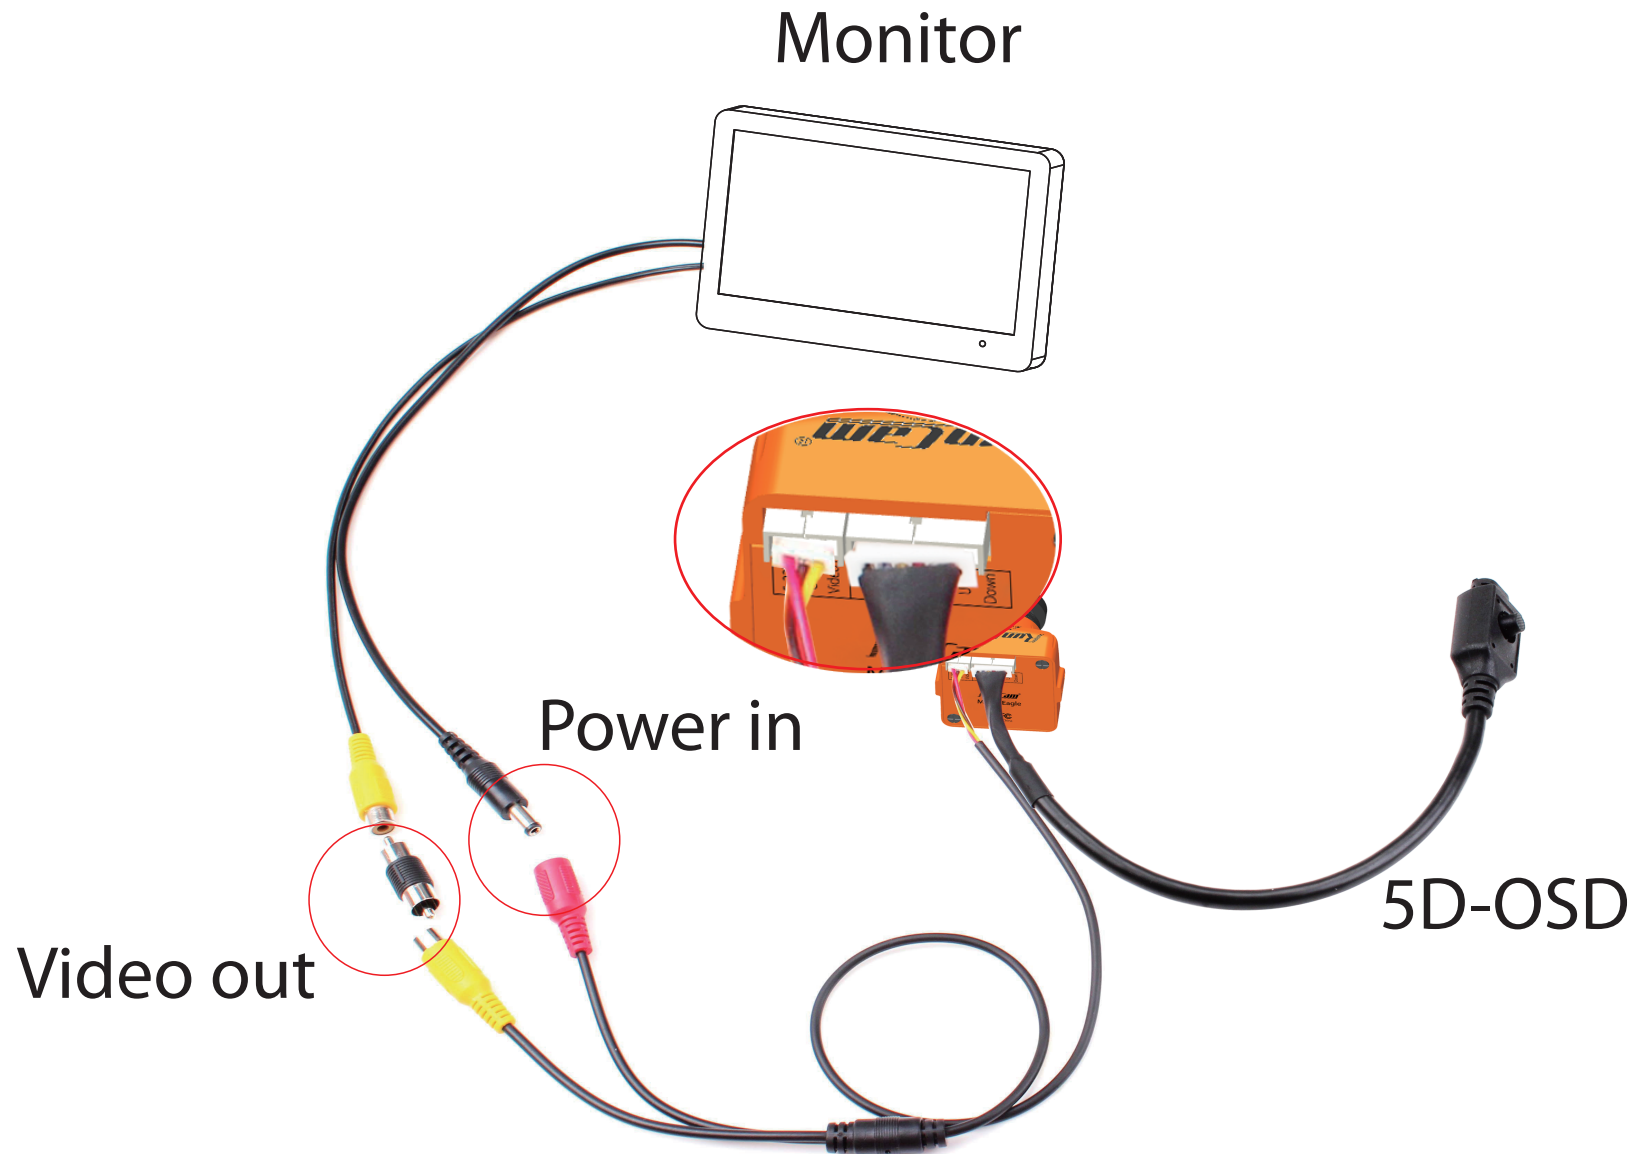

Connection

② For FPV

* Unplug the 5D-OSD menu cable after OSD setting.

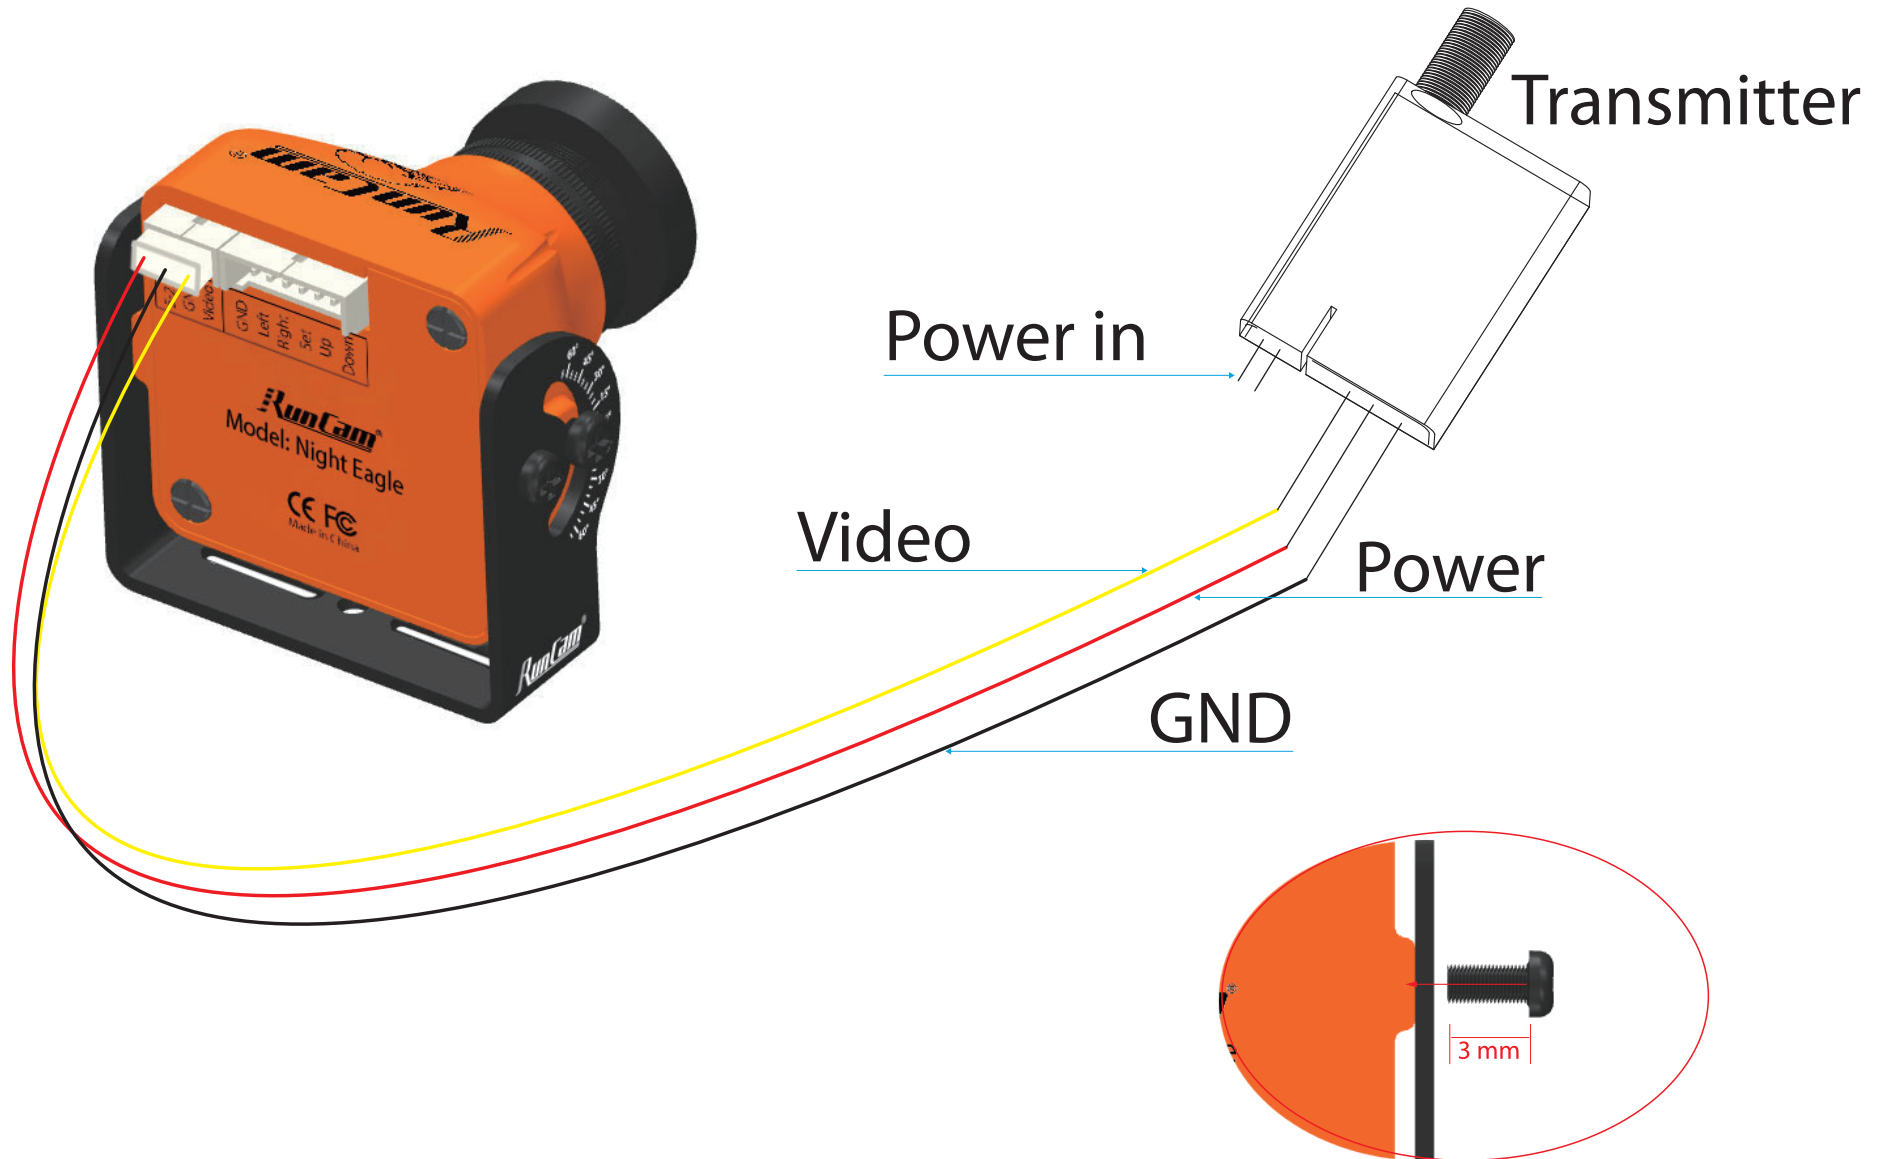

Screw thread: 3 mm maximum

OSD Menu

MAINMENU

IMAGE	←
VIDEO STANDARD	PAL-50HZ
LANGUAGE	ENGLISH
LOAD DEFAULT	
SOFT VERSION	*****
SAVE&EXIT	
EXIT	

- VIDEO STANDARD (PAL-50Hz/NTSC-60Hz)
- LANGUAGE (English/中文)

IMAGE

3D-NR	←
WDR	ON
IMAGE ENHANCE	←
MIRROR	OFF
BRIGHTNESS	36
ZOOM IN	0
RETURN	←

- WDR (ON/OFF)
- MIRROR (OFF/ON)
- BRIGHTNESS (36 / 8-250)
- ZOOM IN (0 / 0-5)

OSD Menu

3D-NR

NR-MODE

AUTO

RETURN



- NR-MODE (AUTO/MANUAL: 0-15)

IMAGE ENHANCE

SHARPNESS



SATURATION



RETURN



- SHARPNESS (AUTO/MANUAL: 0-15)
- SATURATION (AUTO/MANUAL: 0-15)